

# newline

## Special Commands Manual



RS+



ATLAS



MIRA



X



NAOS IP



NT



VN

newline

# Special Commands

RS+

**Factory Menu:** Source + 2 + 5 + 8 + 0

**Block settings:** Up + Up + Down + Down + Left + Right + Left + Right + 2 + 5 + 8 + 0 + 1 + 3

**Unblock settings:** Up + Up + Down + Down + Left + Right + Left + Right + 2 + 5 + 8 + 0 + 1 + 3

**Block settings versions previous to 1.5.5:** Up + Up + Down + Down + Left + Right + 1 + 3

**Unblock settings versions previous to 1.5.5 :** Up + Up + Down + Left + Right + 1 + 3

**Clean passkey:** 2 + 5 + 8 + 0 + 1 + 3 + 7 + 9



Atlas/Mira/Naos

**Factory Menu:** Up + Up + Down + Down + Left + Right

**Admin menu:** Up + Down + Up + Down + Left + Right + Left + Right + Brightness+ + Brightness-

**Clean passkey:** Up + Down + Left + Right + Brightness+ + Brightness-



## Naos IP

**Factory Menu:** Source + Down + Down + Up + Source



## NT Series

**Factory Menu:** Up + Up + Down + Down + Left + Right



newline

## X / VN Series

**Factory Menu:** Source + Up + Down + Left page + Right page

**Clean passkey:** Up + Down + Left + Right + + Left page + Right page

